


**UMB-Config-Tool**  
Operating Instructions  
UMB Configuration Software



Status 02.09.2015  
Document version 2.5

G. LUFFT MESS- UND  
REGELTECHNIK GMBH  
  
POSTFACH 4252  
70719 FELLBACH  
TEL. 49 (711) - 51822-0  
FAX 49 (711) - 51822-41

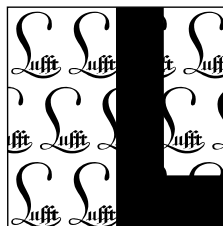

**Lufft**

## Table of Contents:

<b>Preface, designated use</b>	<b>4</b>
<b>Installation UMB Config Tool</b>	<b>4</b>
System requirements	4
<b>Communication settings / communication</b>	<b>5</b>
<b>Creating a sensor list</b>	<b>7</b>
<b>Configuring sensors</b>	<b>8</b>
Assigning device ID's	10
Interface settings	10
Configuring ANACON-UMB	11
IRS31Pro-UMB and the mode IRS31-UMB compatibility	12
Configuration of sensors operating in different protocols (e.g. MODBUS, SDI12)	12
<b>Query measurement values</b>	<b>12</b>
<b>Updating the channel list for a sensor</b>	<b>14</b>
<b>Firmware update</b>	<b>15</b>
Check current firmware status	15
Program a sensor update	16
Possible sources of error	20
<b>Resetting sensors to factory defaults</b>	<b>20</b>
<b>Calibration of a VS20-UMB visibility sensor</b>	<b>21</b>
<b>Resetting the rain quantities of WSx-UMB</b>	<b>22</b>
<b>Resetting the service level of NIRS31-UMB</b>	<b>22</b>
<b>Miscellaneous</b>	<b>22</b>
<b>Manual update with HexLoad</b>	<b>25</b>
Update ISOCON-UMB	25
Manual update of IRS21CON-UMB	25
Manual update of VS20-UMB, R2S-UMB and other UMB-Sensors	26
<b>Additional information</b>	<b>27</b>

## Version history:

Document version	Date	Edited by	Description of amendment
1.0	24.01.2007	EES	Taken from Short Instructions V02 and completed
1.1	12.02.2007	EES	System requirements supplemented
1.2	23.02.2007	EES	New screenshots added
1.3	10.02.2009	BR	Adjustments for Software V1.0 (English)
1.4	27.10.2009	BR	Adjustments for Software V1.1 (English)
1.5	08.10.2010	BR	Adjustments for Software V1.3 (English)
1.6	18.02.2011	BR	Integration of new sensors, bug fix heater capacity Ventus-UMB
1.7	08.08.2011	BR	Integration of ARS31PRO Smoothing operator for ft ARS31 adjustable Protocol switching functionality for sensors running in different protocols Coupling of IRS31 and ARS31 integrated Anacon: New sensor CMPx integrated TCP/IP support Centralized settings for WSx energy management
1.8	02.02.2012	BR	Manual for UMB Config Tool V1.6 Updates for ARS31(Pro) for actual state of development Updates for DPI-awareness Units are shown for all adjustments when available Analogue outputs: When the source channel is changed, the range for the output is automatically adjusted Support for write protected sensor configuration files implemented Option to chose name/path for sensor configuration files
1.9	08.03.2012	BR	Extended NIRS31-UMB service functions Warning when trying to downgrade a firmware of a module
2.0	16.10.2013	BR	New, incompatible structure of ini file in preparation for expanded addresses for group ids. Supports IRS32Pro-UMB. Rework of the communication layer of the software. WSx-UMB Support for NMES: XDR with firmware release 4.5.
2.3	14.11.2014	BR	Marwis-UMB integrated
2.6	02.09.2015	BR	WS800-UMB, support for most recent release of ARS31Pro-UMB, support for most recent release of VENTUS-UMB

## Preface, designated use

The UMB Config Tool has been created for configuring, commissioning, maintaining, calibrating and checking Lufft UMB sensors, modules and systems.

It is not designed for reading out and storing data permanently. For the permanent data evaluation Lufft offers the software SmartView3.

When in the UMB Config Tool values or ranges of values are shown, and these are different from those in the device description of the sensor, always the details in the operating manual for this sensor version counts (see also "channel list update a sensor").

The UMB Config Tool is single seat software. It is not intended that multiple users use this software from the same directory at the same time.

The UMB Config Tool is able to create logfiles. When these files are opened by other programs during the operation of the UMB Config Tool, there might occur writing errors (i/o Errors) when the UMB Config Tool tries to update them, and the file will not update correctly. Details to special functions for sensors can be found in the operating instructions of the sensor.

## Installation UMB Config Tool

Start 'Setup\_UMB\_Config\_XXXXXX.EXE' and follow the instructions of the installation programme.

The software is installed under 'C:\Lufft\UMB-Config' as standard. In MS-Windows Vista and MS-Windows 7 you must not install the software in the directories C:\Program Files or C:\Program Files (x86) because these directories are specially protected system directories, and the protection does not work well with the normal program function of this tool. Start the application with 'Start' → 'Programme' → 'Lufft UMB Config' → 'Config Tool'.

Installation paths:

Path	Content
...\Lufft\UMB-Config\	Application and INI files
...\Lufft\UMB-Config\Firmware	Device firmware (not files)
...\Lufft\UMB-Config\Hexload	Bootloader programme
...\Lufft\UMB-Config\UMB_FWUpdate	Firmware update program for Marwis-UMB
...\Lufft\UMB-Config\Konfig	Stored device configurations

Copy the current device firmware into the firmware directory prior to installing firmware updates.

The UMB Config Tool can be uninstalled with '...\Lufft\UMB-Config\UNWISE.EXE'.

## System requirements

Windows 2000 / XP / Vista / 7 / 8 / 8.1 / 10 respectively 32 or 64 Bit

10 MB free hard disk capacity

A free serial interface (COM) for configuration, diagnosis and firmware update

Alternative: TCP/IP connection to the measurement setup for configuration and diagnosis

## Communication settings / communication

The UMB Configtool works in principle with connections to the measurement setup with connection settings 19200 baud, 8 data bits, 1 stop bit, no parity. A different baud rate is only possible by editing the file ULSPS.INI.

From UMB Configtool version 1.5 in addition to the direct serial connection to the measurement setup a connection using TCP / IP is supported. The TCP / IP communication is enabled in the UMB Configtool by setting 'Edit' -> 'Use TCP / IP' or in the "Configure communication settings" dialogue. The measurement setup is connected to an RS-232/RS-485 to LAN / WLAN adapter (or similar device). The UMB Configtool supports the connection to a host name or IPv4 address. Because TCP / IP connections as opposed to direct RS232 connections are affected by latency, an additional timeout has to be specified to wait for the responses of the devices in the UMB-setup. The times given in the configuration dialog are ms. For direct LAN connections to IP addresses, values of 100 (ms) are sufficient. For example, targets with name resolution and GPRS connections require values up to 10000 (ms).

**Note: Only the communication connection type 'raw' is currently supported (not Telnet emulation).**

**Note: The set times are also considered for RS232 connections.**

**Note: Firmware updates are only supported over direct (virtuelle) com ports, not over direct TCP/IP connections.**

Configure communication settings

**Connection type**

Use RS232 (COM)  
 Use TCP/IP

**Hostaddress or hostname**  
192.168.129.13

**TCP-Port**  
8000

**RS232**  
Select Port COM1

**Additional Timeout for slow connections to host**  
1500

OK Cancel

For establishing a connection to UMB devices over the LCOM service program and LCOM, the LCOM service program has to be started first and a connection to the LCOM has to be made. Then the UMB Config Tool can be used with the following connection settings

- Connection type: Use TCP/IP
- Hostname: localhost
- TCP-Port: 8000 (when not changed in the LCOM service program)


to access the UMB devices connected to the LCOM.

Note: In the title of the UMB Config Tool the connection type is shown close to the program name. If the connection is open, the connection is shown.

Connection type (port closed, TCP/IP connection)




Connection type (port open, TCP/IP connection)

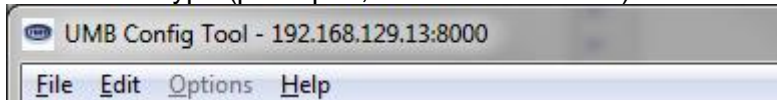

## Creating a sensor list

Menu: Edit → Sensors:

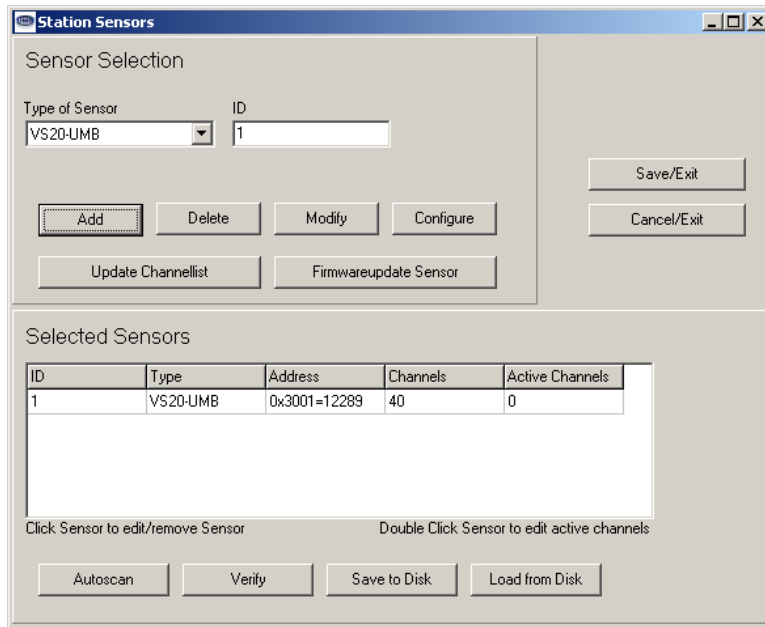

Choose 'Type of Sensor'; enter an ID and add it with 'Add' to the list. With 'Delete' sensors can be deleted, with 'Modify' a sensor in the list can be modified. The sensor shown in 'Sensor Selection' will be deleted or modified.


'Configure' starts the configuration of the sensors in the list. 'Firmwareupdate Sensor' starts the module for updating the firmware of the selected sensor. 'Update Channellist' reads the channel list from the connected UMB-module / sensor and inserts new channels into the existing channel list for this device.

Running 'Autoscan' queries the network for existing UMB devices. 'Verify' checks, if the devices in the list are responding to communication from the master.


With 'Save to Disk' the sensor list (including selected channels) can be stored for later reuse ('Load to Disk').

## Configuring sensors

Select a sensor from the list by clicking it, then click ‚Configure‘. You will get the following dialogue:

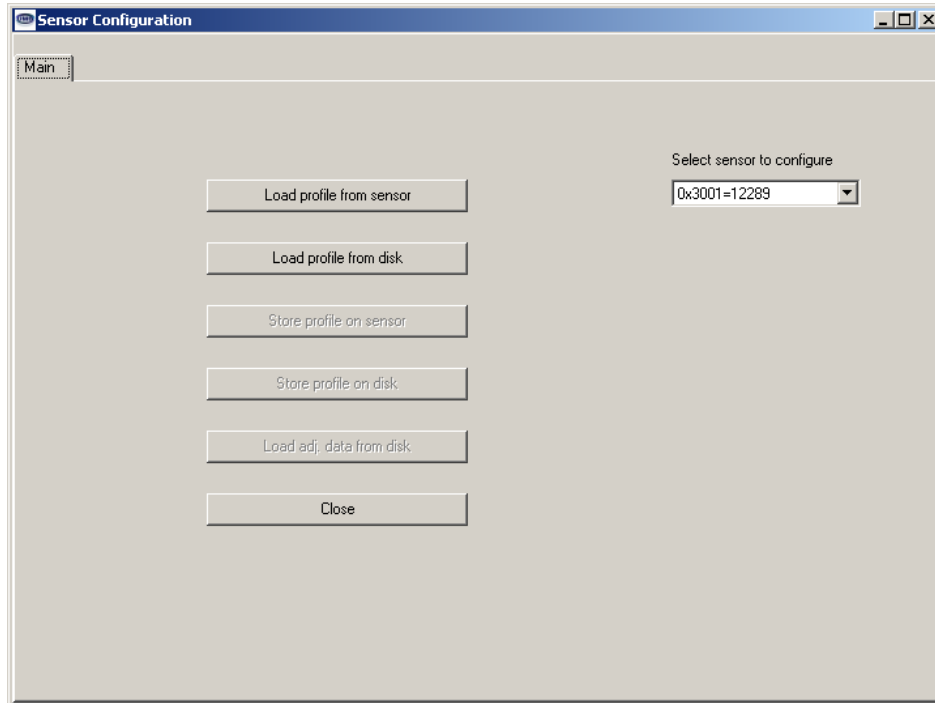


The check box "select sensor to configure" allows to switch to another sensor of the measurement setup.  
 Load the configuration of the sensor with ‚Load profile from sensor‘. Adjust the values in the mask to suit your needs.

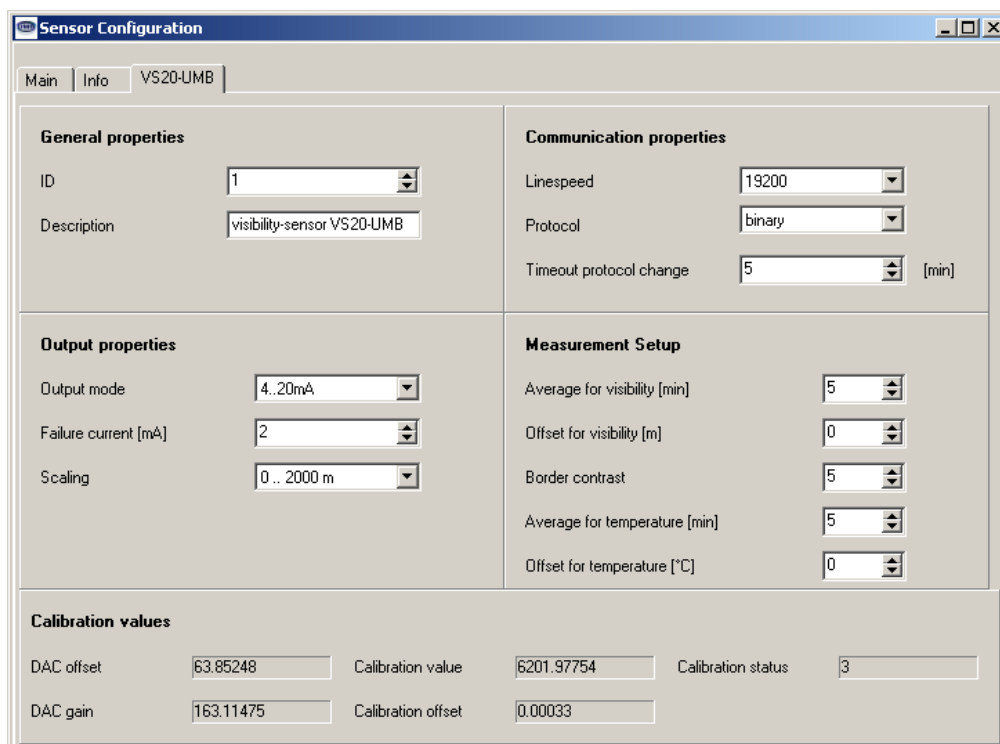



After the values have been set, store them on the device with ‚Store profile on sensor‘.

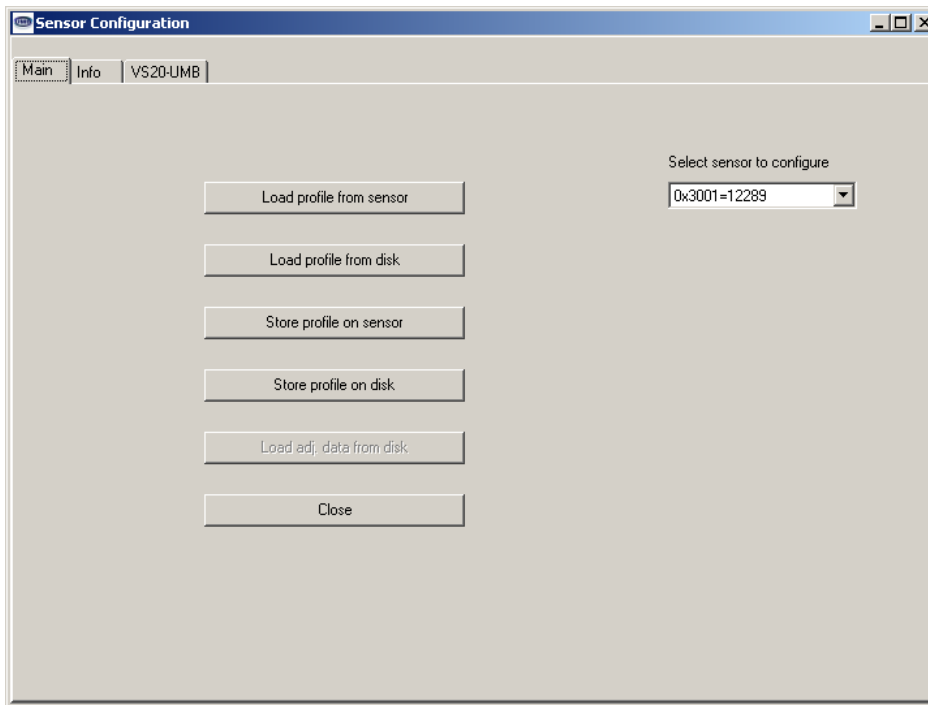

With ‚Store profile on disk‘ a sensor configuration might be stored on a hard drive. Stored configurations of sensors might be loaded with ‚Load profile from disk‘.


**Note: In case of a service call, a saved sensor configuration helps a lot more than one or more screenshots of the sensor configuration.**

## Assigning device ID's

Each device in a UMB network requires a unique address.

Addressing takes place via a 16 bit address. This is divided into a sensor class ID and a device ID.

To avoid address duplication, the device ID's are assigned in ascending order per sensor class (i.e. sensor type):

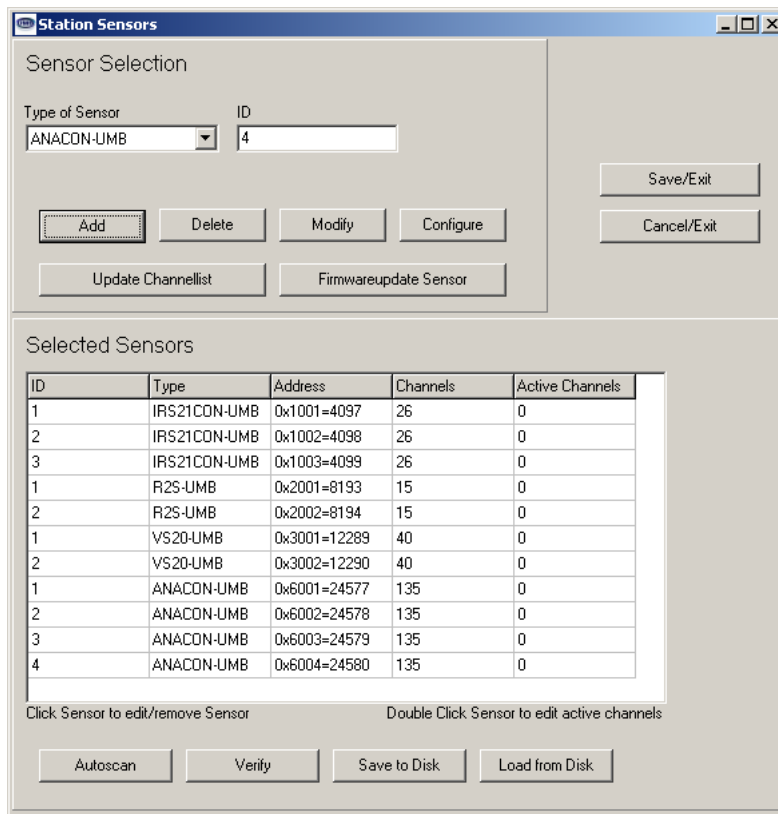

**ATTENTION:** When configuring new equipment please note that **new devices always have the ID 1!** If there are several sensors of the same type in a network it makes sense to configure the sensors individually with their corresponding ID's **before** commissioning the network.

## Interface settings

The interface settings made by the UMB Config Tool relate to the specified sensor.


**Attention: Only change the interface settings if you are sure you have to, and if you are aware of all the consequences of this change. This change may not be reversed in a simple manner.**

## Configuring ANACON-UMB


As the ANACON-UMB is a universal measurement transmitter which can be operated with various analogue sensors, this module must always be configured to the connected sensor **before** commissioning.

To do this, connect the module to the power supply (with no additional participants on the bus) and connect to the PC via an RS232 cable (1:1). Load the current configuration via 'Load profile from Sensor' as in the section 'Configure Sensor':

Select the connected sensor type in 'Measurement Setup' under 'Channel 1' and 'Channel 2':

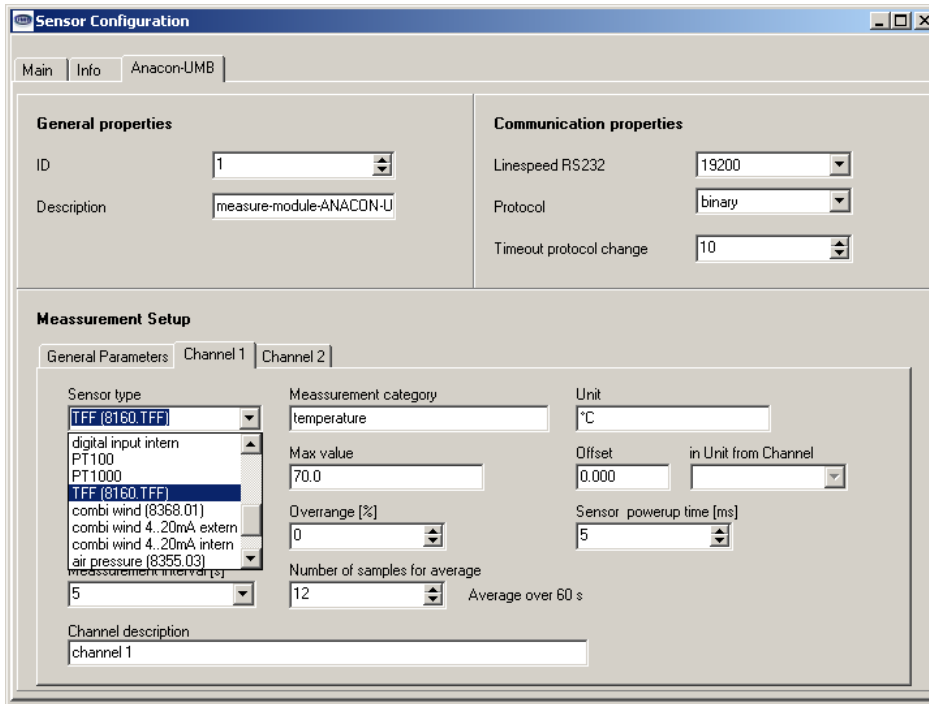

If necessary, set the ID, measurement interval and number of measurements for the min-, max- and average values:

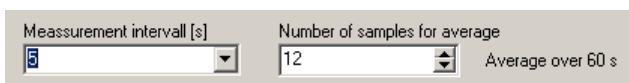

Then save the amended configuration in the module with 'Store profile on sensor' under 'Main'.

**ATTENTION!! In the case of the temperature/humidity sensor (TFF 8160.TFF), the values for C12 and C76, which are marked on the sensor head, must be recorded under 'General Parameters'!!!**



## IRS31Pro-UMB and the mode IRS31-UMB compatibility

To configure an IRS31Pro-UMB for IRS31-UMB compatibility, you have to add an IRS31Pro-UMB to your measurement setup and configure it.

**Attention: Is the sensor programmed for IRS31-UMB compatibility, you have to add an IRS31-UMB to you measurement setup with the corresponding id (for example to query measurement data or for sensor configuration). Is detected while reading the configuration of a IRS31-UMB that the configuration is from an IRS31Pro-UMB in compatibility mode, the configuration sheet of the IRS31Pro-UMB is shown, and the compatibility mode cab be switched off.**

## Configuration of sensors operating in different protocols (e.g. MODBUS, SDI12)

If sensors are permanently set to protocols other than UMB (Binary or ASCII) they must be changed first to the UMB protocol if you want to change the configuration with the UMB Configtool.

The procedure for doing this is as follows:

1. Separate measurement setup from the supply voltage
2. In the UMB Configtool select 'Options' -> 'Switch all sensors temporarily to UMB protocol'
3. Connect the Measurement setup again to the supply voltage.
4. After about 5 seconds (or longer) click 'Exit' in the UMB Configtool

The sensors can now be configured for the time in minutes set under, timeout for protocol change 'in the sensor settings by UMB Configtool. UMB telegrams e.g. Measurement acquisition, configuration read / write reset the timeout to the time set. After a reset, the sensor is running again in the configured protoco.


**Note: After a 'Store profile on Sensor' the sensor is reset automatically by the UMB-Configtool and then runs again in the configured protocol.**

This functionality is available on the following products::

Sensor	Firmware version or higher
ANACON-UMB	Not available
ARS31-UMB	Not available
ARS31pro-UMB	Not available
DACON8-UMB	Not specified
IRS31-UMB	Not available
IRS31Pro-UMB	Version 1.0
Marwis-UMB	Version 1.0
NIRS31-UMB	Version 1.2
R2S-UMB	Not available
VENTUS-UMB	Version 1.6
VS20-UMB	Not available
V200A-UMB	Version 1.6
WSx-UMB	Version 2.2

## Query measurement values

The channel list of a sensor is opened by double clicking a sensor in the sensor list:

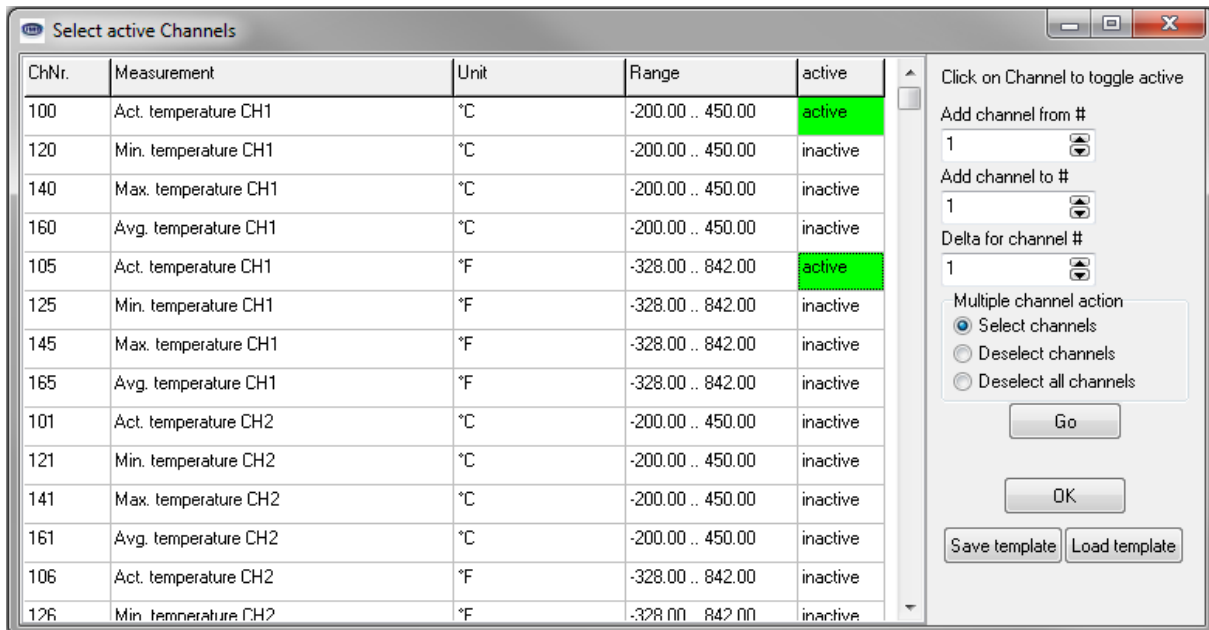

Here you are able to select the channels for query, either through clicking the corresponding channel in the list, or by using the “Multiple channel action” function with the channel numbers.

Example:

If channels 100, 120, 140 and 160 of the list above should be selected for query with the UMB Config Tool, this could be done with the following settings:

Add channel from #: 100

Add channel to #: 160


Delta for channel #: 20

Multiple channel action choose “Select channels” and then click on “Go”.

The active channels of the current sensor can be saved by “Save template” to a file. By using “Load template” a previously saved list of active channels can be applied to a sensor with any ID.

**Note:** If a channel mentioned in the operating instructions of a sensor is not shown in the sensor list, the channel list of the UMB-Config-Tool for this sensor needs to be updated. It is advised, that you update the Firmware of the sensor before updating the channel list (see chapter Firmware Updates).

The measurement is started in menu ‚File’ → ‚Start measurement’.

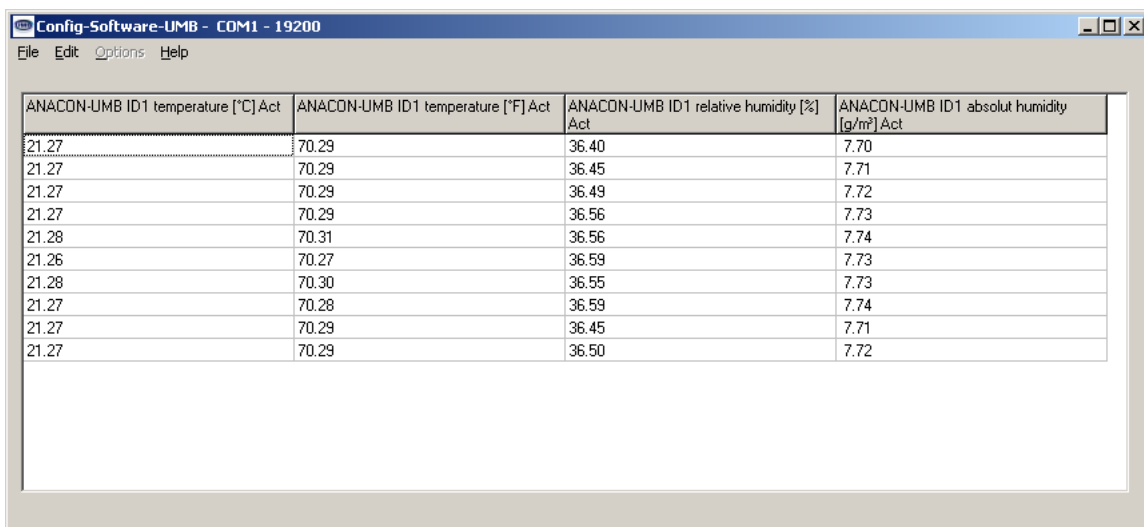


To change the sampling rate of the software click ‚Edit‘ → ‚Sampling Rate‘. A sample rate of 1s does not correspond to the UMB-protocol. In the case of missing answers of the sensor it can lead to erroneous presentation of the received values.

**Attention:** The selected channels only affect the data query in the UMB-Config-Tool. They do not influence the query of channels in any other software.

## Updating the channel list for a sensor

Add the desired sensor to the measurement setup and make it to the selected sensor (by clicking the list entry).

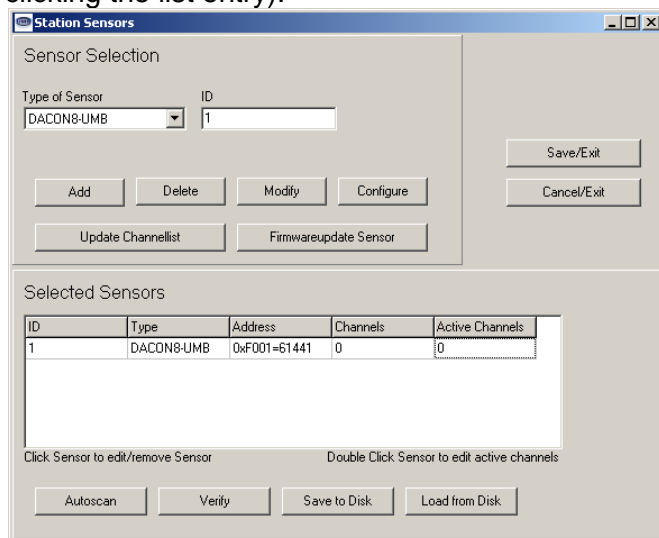


Then choose “Update Channellist”. The UMB-Config-Tool now reads the channels from the desired sensor and sorts the new ones into the channellist. During this operation no channels are deleted, but descriptions and other information of the old channels are replaced by the newly read ones. Also the Type of Sensor might be changed during this operation. This process also works for up to now unused sensortypes. However, such sensors cannot (yet) be configured with the UMB-Config-Tool but querying measurement values works.

## Firmware update

Before implementing any update, please check with Lufft concerning the current firmware status of the UMB products. You must not program an older firmware into a module, than the one which is currently installed without consulting Lufft over this issue.

### Check current firmware status

The current status of the firmware should be checked before updating the firmware. To do so, read the configuration under 'SensorConfig'. The current version of the software is shown under 'Rev. firmware' on the 'Info' page.

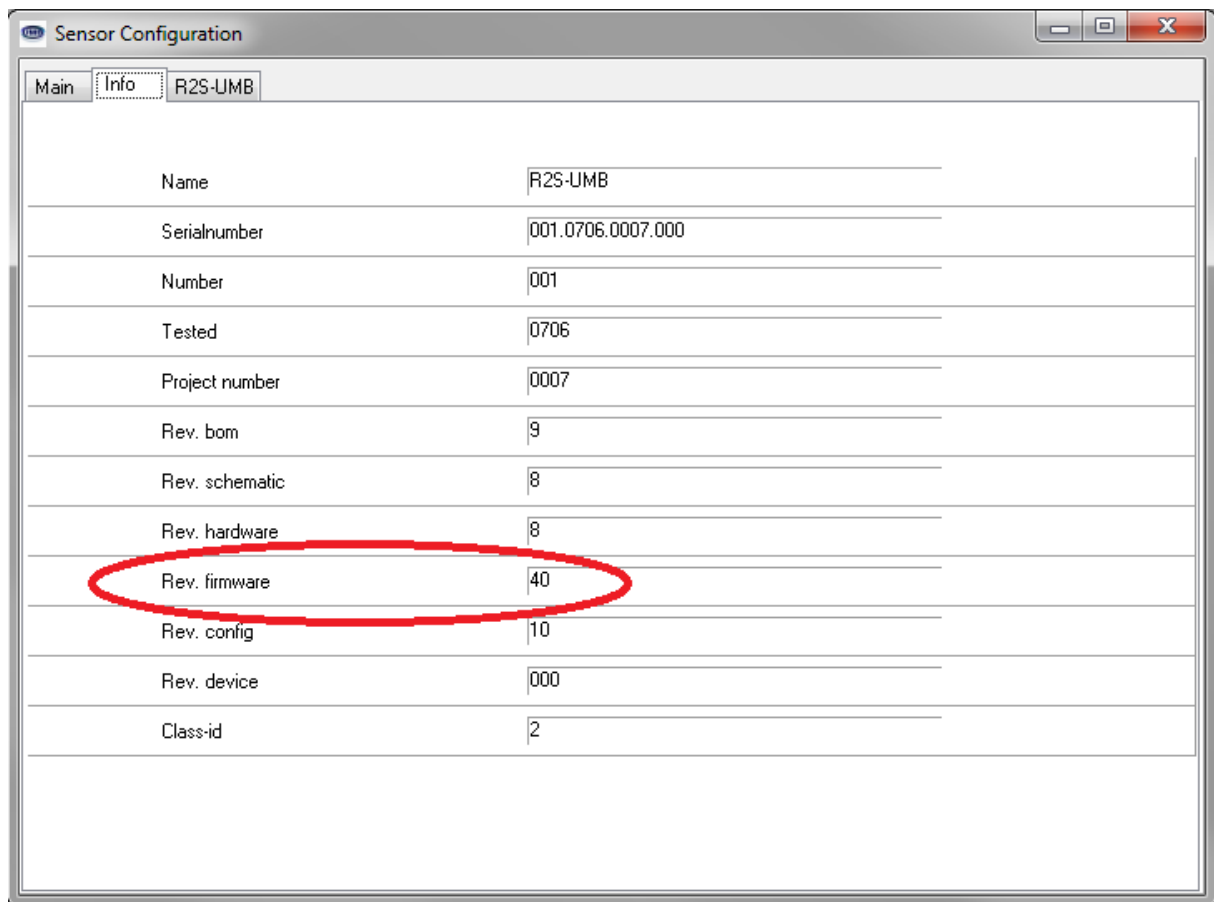

The screenshot shows a window titled "Sensor Configuration" with three tabs: "Main", "Info", and "R2S-UMB". The "Info" tab is selected. The window displays a table of configuration parameters for the "R2S-UMB" device. The "Rev. firmware" field is circled in red.

Parameter	Value
Name	R2S-UMB
Serialnumber	001.0706.0007.000
Number	001
Tested	0706
Project number	0007
Rev. bom	9
Rev. schematic	8
Rev. hardware	8
Rev. firmware	40
Rev. config	10
Rev. device	000
Class-id	2

40 corresponds to Version V4.0

## Program a sensor update


Before updating, save the current device firmware (mot file) in the installation directory under 'Firmware' (e.g. C:\Programme\Lufft\UMB-Config\Firmware).

**ATTENTION:** When updating ANACON-UMB or IRS21CON-UMB, the RS232 connection must be plugged **directly** into the module to be updated. Anacon-UMB and IRS21CON-UMB with production date from February 2009 on can also be updated over the bus. ANACON-UMB without frontside RS232 can only be updated over the bus. This requires at least one ISOCON-UMB in the measurement setup.

**ATTENTION:** When updating a Marwis-UMB the program „UMB\_FWUpdate.exe“ is used instead of the program „Hexload.exe“. Both programs are installed when you install the UMB Config Tool in subdirectories of the installation directory of the UMB Config tools.

ISOCON-UMB have to be updated manually. The corresponding instructions can be found the section "Updating manually with HexLoad"


Open the sensor list under 'Edit' → 'Sensors'; if necessary, regenerate the list with 'Autoscan' or load a stored list with 'Load from Disk'. With 'Verify', check whether the sensors available in the sensor list are also reachable on the network.

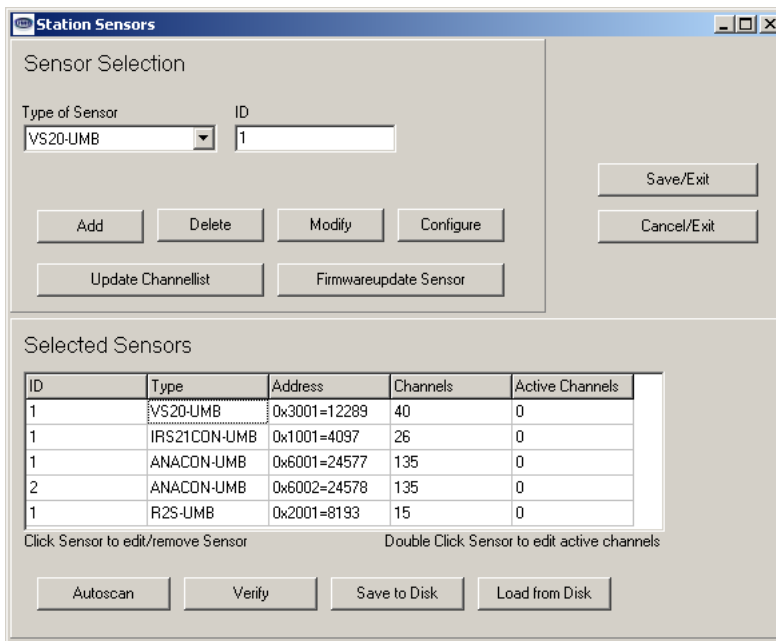

Select the appropriate sensor from the sensor list; the selected sensor is displayed in the 'Selected Sensors' section (VS20-UMB in the example).


The update process is started with 'Firmwareupdate Sensor'. The following window opens when this function of the Config-Tool is used for the first time:



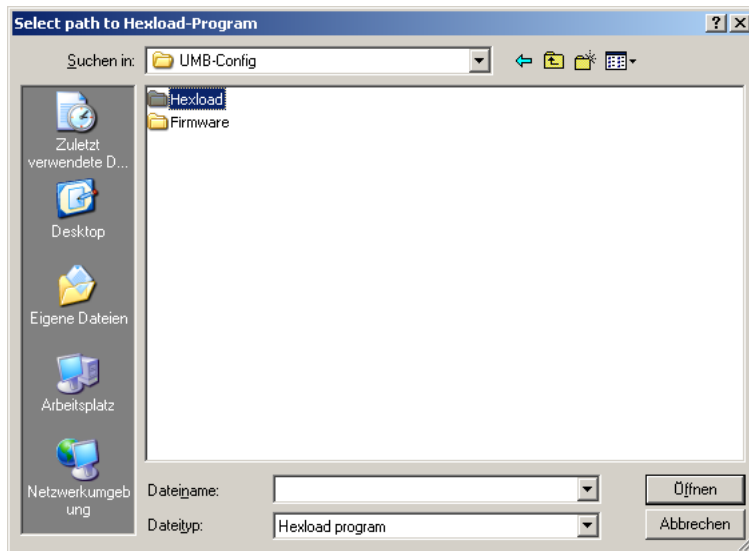


Under 'Hexload', select the 'HexLoad.exe' file.

or

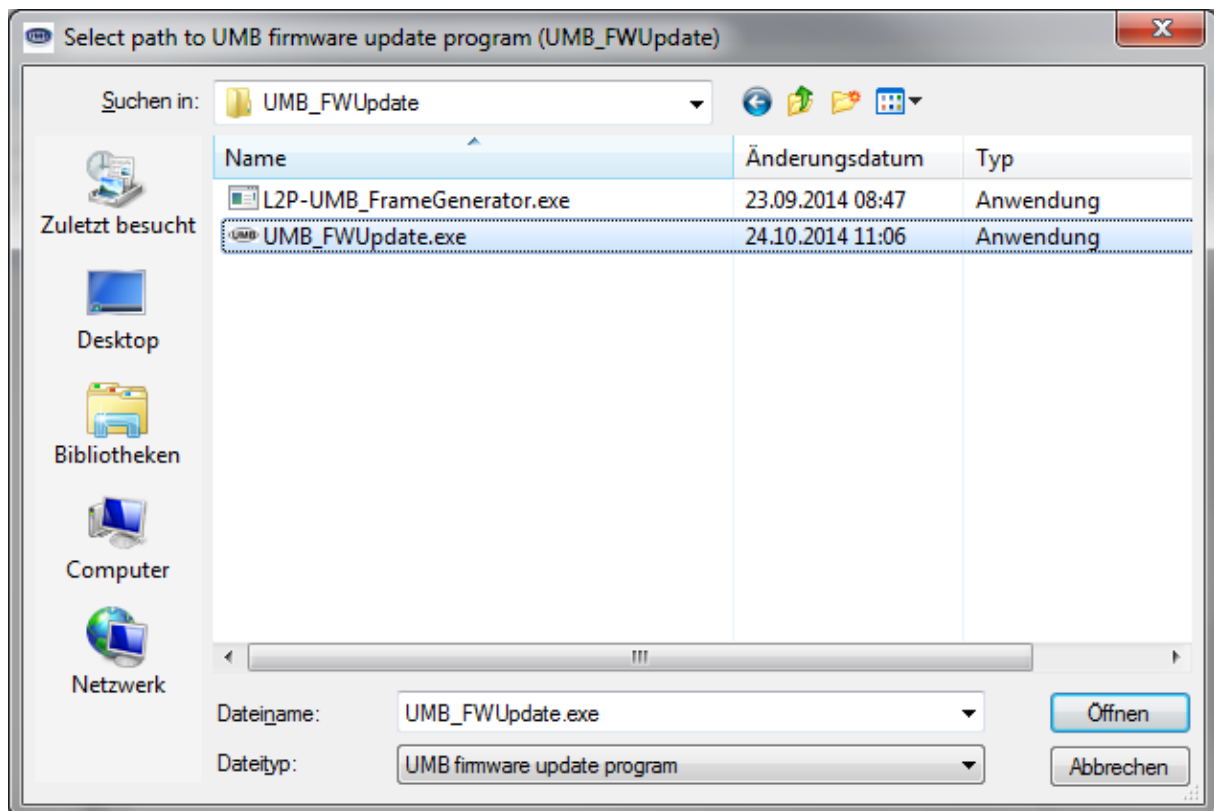


choose UMB\_FWUpdate.exe in the folder UMB\_FWUpdate.


After this (and on all future updates) a window opens in which you select the relevant mot file for the update:

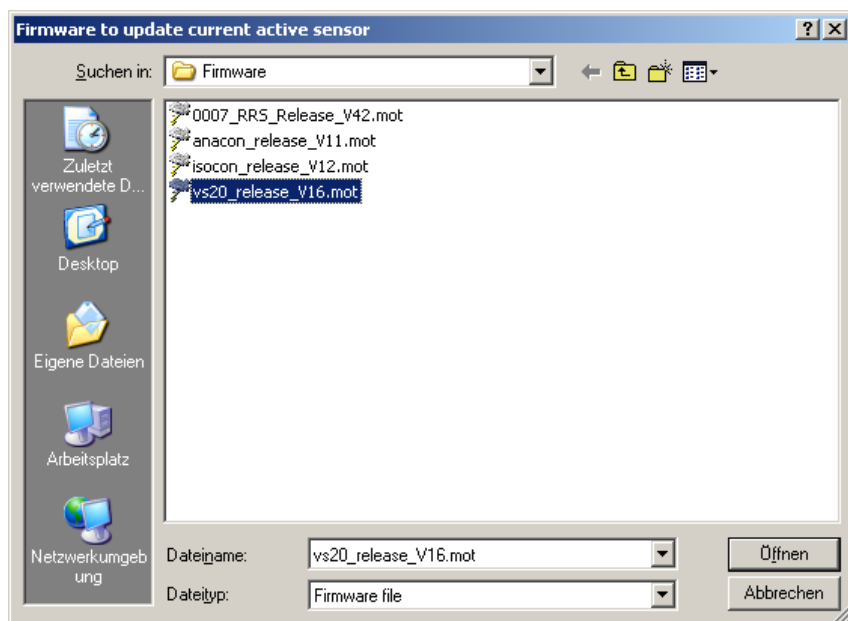


The device is then programmed:

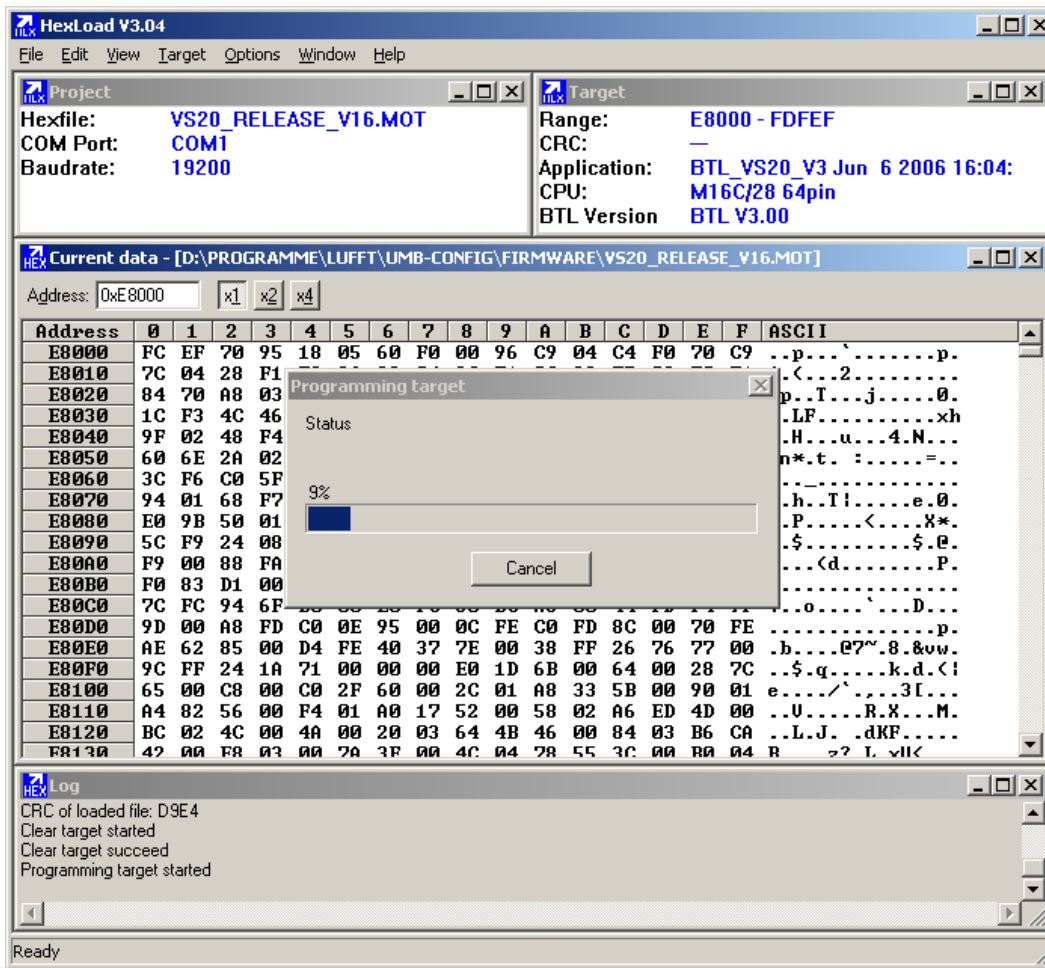

For Marwis-UMB:

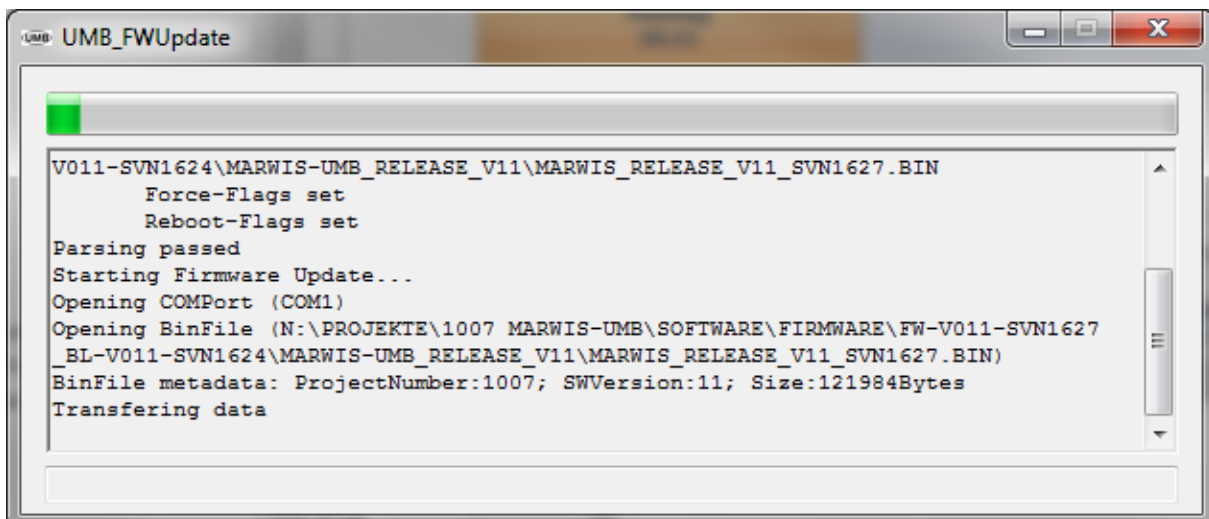

After successful programming the Config-Tool reports as follows:

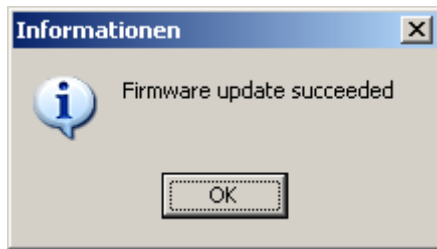


The device then operates with the new firmware.

### Possible sources of error

- If a firmware is selected which does not correspond to the sensor, the error message 'Invalid Firmware-Filename for this module' is displayed.
- When updating older ANACON-UMB or older IRS21CON-UMB, the RS232 connection must be plugged **directly** into the module to be updated.
- An ISOCON-UMB cannot be updated using this procedure (see page 25, Manual update with HexLoad).
- There is a plausibility check with the version number of the installed firmware, and the version number of the firmware file. **A replacement of a newer firmware on a sensor with an older version is only allowed by a direct order from the manufacturer of the module. If you don't have the order, and the module is damaged by the action, the warranty is void.**
- **With Marwis-UMB manufactured before or in 11/2014 there is the possibility of an incompatible firmware update protocol used by this program.** Please contact then the manufacturer hotline with the serial number of the sensor ready.

### Resetting sensors to factory defaults

By choosing „Options“ – „UMB Reset to factory default“ in the main menu, UMB sensors and modules can be reset to factory defaults.

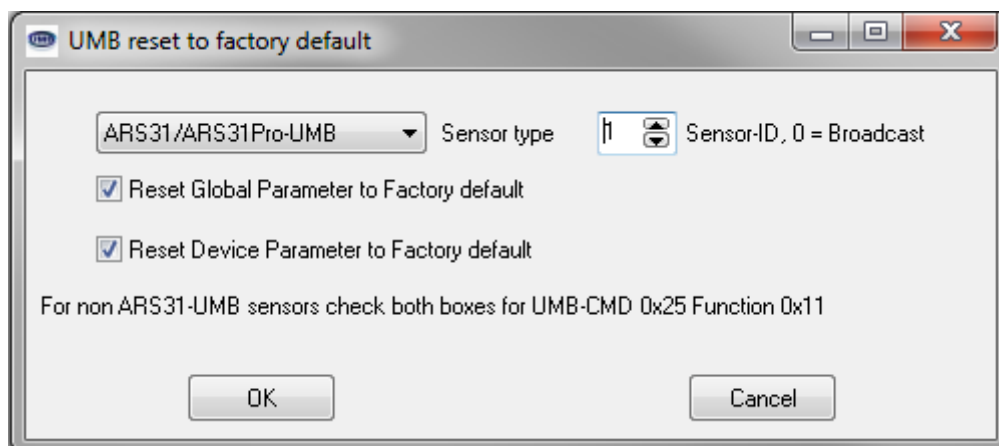


**Attention: This function sets the Sensor-ID to the factory default '1' as well! When 'Broadcast' is used for Group-ID and "0" for the Sensor-ID, all connected sensors are reset to factory defaults!**


Since sensors do not answer on broadcast messages, this function does not deliver feedback when executed.

## Calibration of a VS20-UMB visibility sensor

Start by creating a sensor list, containing the VS20-UMB to adjust. Example:

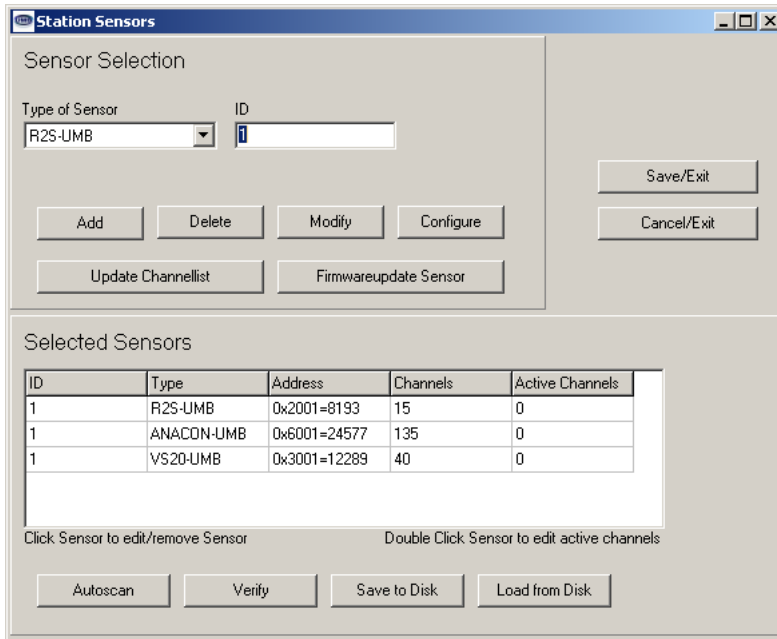

Then chose 'Save/Exit', 'Options' → 'VS20-UMB Calibration'. Run the calibration according to the description in the text field and like described in the manual from the calibration kit. See picture below.

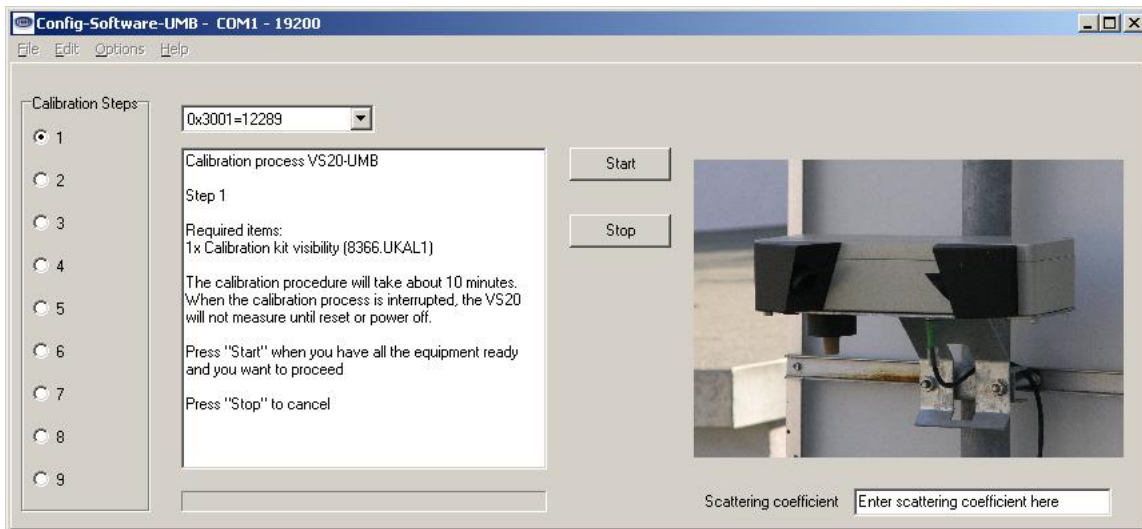


## Resetting the rain quantities of WSx-UMB

With the menu point 'Extras -> reset WSx-UMB rain sums' the absolute values of the rain quantities in all connected WSx-UMB are set back to 0. It is not necessary to establish a measurement setup with the WSx-UMB. It is however recommended to check if the command has been carried out successfully by reading out the respective values on the corresponding WSx-UMB.


## Resetting the service level of NIRS31-UMB

After carrying out maintenance and replacing the reflector unit, the sensor must be informed about this procedure using the UMB-Config-Tool.

In the menu under 'Options', select the entry 'NIRS31-UMB' – 'NIRS31-UMB Service':

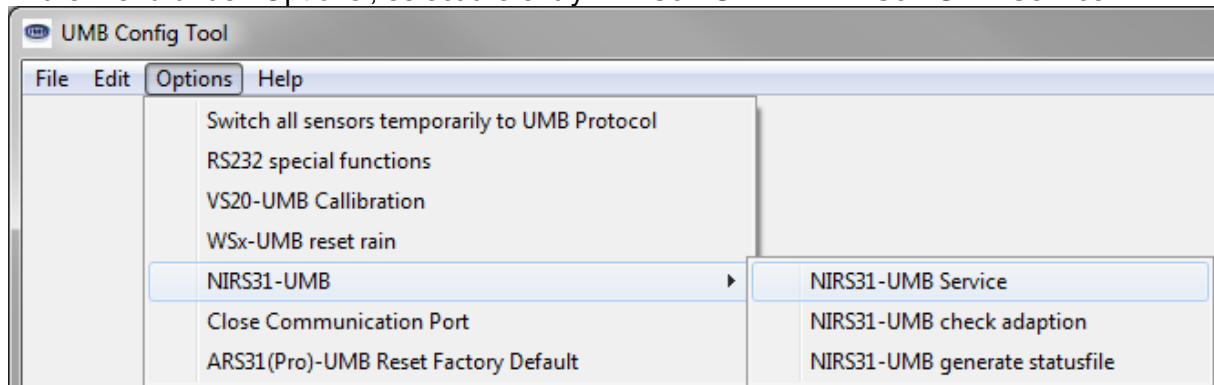

Confirm the performance of maintenance with 'OK'.

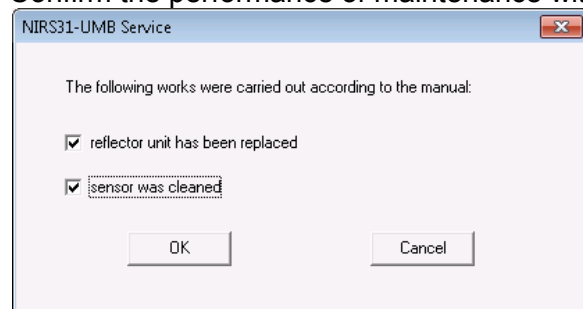

**Important note:** Only use this function if maintenance was actually carried out and the reflector unit was actually replaced.

## Miscellaneous

,Edit' à ,Password entry' allows the user to change in a different user group with advanced possibilities.

Parameters only adjustable by modifying the file ULSPS.INI:

[Settings]

LogToFile=1

Writes the measurement values into a log file, file name see ,LogFileName'. The column headers are formatted GroupID:ID:Channel (see table of measurement values).

LogFileName=Values.Txt

Basic file name for the log file. Will be expanded by the current date. The software creates a new file for every new date.

*FTimestampsHaveMS=1*

Timestamps for measurement data contain milliseconds, if this entry is missing or 0, the resolution of timestamps are seconds.

*CreateDayFiles=1*

The registered values are stored in daily files. If the value is 0, they are all stored in one single file.

*MaxRetriesForProtocolWhenFailure=2*

Number of retries per command, before a failure is reported.

*AdditionalTimeoutInMSForSlowConnectionsToHost=0*

Time in ms, which is waited additionally to the period of reply specified in the UMB protocol, before for this instruction an Timeout is produced. The time specified in the protocol applies to direct 1:1 communication. If the query is made e.g. by GPRS consider using 10000 (ms, corresponds with 10s) here. Note: With 2 repetitions for each instruction (see *MaxRetriesForProtocolWhenFailure*) it takes  $3 \times 10s = 30s$ , before this instruction is rated as „Failed. Absolutely consider if an ‚Autoscan‘ is to be accomplished, and/or a measured value query is run with a short interval. This setting will be adjustable in the TCP/IP configuration dialogue.

*InfileVersion=2*

Identifies the version of the ini-file format. Since Version 2 every sensor has its own section in the file. [S1\_0] is the section for the sensor with group-id 1. If this entry is not available, the UMB Config Tool (version 2 or later) assumes an old ini-file version and tries to convert it into the new structure. This will take about 1 – 2 minutes (depending on the computer).

*AutoScanDeltaForFail=3*

With ‚Autoscan‘ for each possible group by address 1 beginning ‚a ‚Verify‘ command is sent. If the device does not respond the next *AutoScanDeltaForFail-1* addresses in ascending order are queried with ‚Verify‘. The queried groups are 1 to 14 (group 0 is used for equipment spreading broadcasts, group 15 are masters, here the software itself).

Example: Measurement setup with 1 device of group 2 Id 1 and 1 device of group 3 Id 2.

*AutoScanDeltaForFail* is set to 3.

List of queries (addresses, in Groupid:Id notation):

1:1 – Failed  
 1:2 – Failed  
 1:3 – Failed  
 2:1 – OK  
 2:2 – Failed  
 2:3 – Failed  
 2:4 – Failed  
 3:1 – Failed  
 3:2 – OK  
 3:3 – Failed  
 3:4 – Failed  
 3:5 – Failed  
 4:1 – Failed  
 4:2 – Failed  
 4:3 – Failed  
 5:1 – Failed  
 5:2 – Failed  
 5:3 – Failed  
 6:1 – Failed

6:2 – Failed  
6:3 – Failed  
7:1 – Failed  
7:2 – Failed  
7:3 – Failed  
8:1 – Failed  
8:2 – Failed  
8:3 – Failed  
9:1 – Failed  
9:2 – Failed  
9:3 – Failed  
10:1 – Failed  
10:2 – Failed  
10:3 – Failed  
11:1 – Failed  
11:2 – Failed  
11:3 – Failed  
12:1 – Failed  
12:2 – Failed  
12:3 – Failed  
13:1 – Failed  
13:2 – Failed  
13:3 – Failed  
14:1 – Failed  
14:2 – Failed  
14:3 – Failed

Thus 45 telegrams, in order to find the 2 devices (with this ID). Since every ‚Failed‘ is repeated 2 times (default setting), that is altogether 131 queries. If now `AdditionalTimeoutInMSForSlowConnectionsToHost` is set to 10s ‚Autoscan‘ takes about 25 minutes - so choose the parameters carefully if the ‚Autoscan‘ function is to be used.




## Manual update with HexLoad

The following procedure must be applied if a sensor update using the Config-Tool was interrupted or in the case of an ISOCON-UMB.

### Update ISOCON-UMB

1. Disconnect the power supply and the connected sensor from the ISOCON-UMB module
2. Connect the RS232 interface of the ISOCON-UMB module to the PC
3. Start HexLoad (...\\Programme\\Lufft\\UMB-Config\\Hexload\\HexLoad.exe)
4. Load the current mot file with 'File' → 'Open'. This **must (!!!)** have the file designation 'isocon\_release\_Vxx.mot', where 'xx' specifies the version number.
5. Switch on the power supply of the ISOCON-UMB module.
6. 'BTL\_ISOCON\_Vx....' must now be displayed in HexLoad in the 'Target' window next to 'Application'.

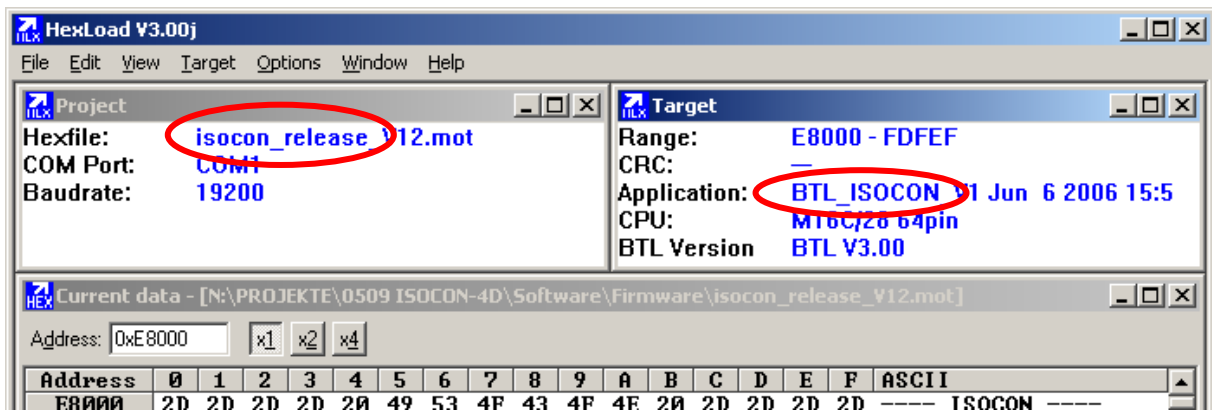


7. Start the programming with F9.
8. If programming is successful the message 'Job succeed' is displayed; then exit HexLoad.
9. The module is now ready for operation with the new firmware.

### Manual update of IRS21CON-UMB


If it is necessary to update an IRS21CON-UMB module manually, proceed as in the case of 'Update ISOCON-UMB', where the name of the mot file must correspond to 'IRS21con\_Vx\_x.mot'.

## Manual update of VS20-UMB, R2S-UMB and other UMB-Sensors

1. Disconnect the power supply **of the sensor** from the ISOCON-UMB
2. Switch on the power supply of the ISOCON-UMB module
3. Connect the RS232 interface of the ISOCON-UMB module to the PC
4. Start HexLoad (...)\Programme\Lufft\UMB-Config\Hexload\HexLoad.exe)
5. Load the current mot file with 'File' → 'Open'. The file **must (!!!)** have the following designation, where 'xx' specifies the version number.
  - VS20-UMB: 'vs20\_release\_Vxx.mot'
  - R2S-UMB: 'R2S\_Release\_Vxx.mot'
  - WSx-UMB: 'WSx\_Release\_Vxx.mot'
  - IRS31-UMB: 'IRS31\_Vxxx.mot'
  - ARS31-UMB: 'ARS31\_Vxx.mot'
  - VENTUS-UMB: 'Ventus\_Vxx.mot'
  - V200A-UMB: 'Ventus\_Vxx.mot' (!)
  - NIRS-UMB: 'NIRS\_Release\_Vxx.mot'
6. Connect the power supply **of the sensor** to the ISOCON-UMB module.
7. The following test must now be displayed in HexLoad in the 'Target' window next to 'Application':
  - VS20-UMB: ',BTL\_VS20\_V.....'

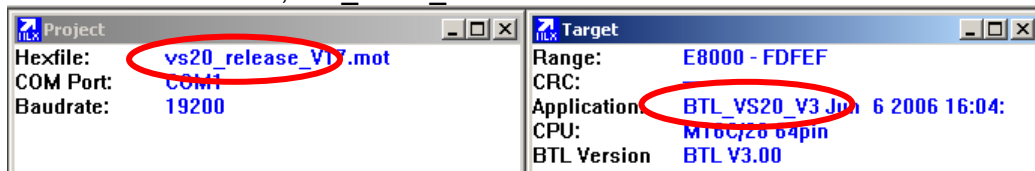

- R2S-UMB: ',BTL\_R2S\_V.....'

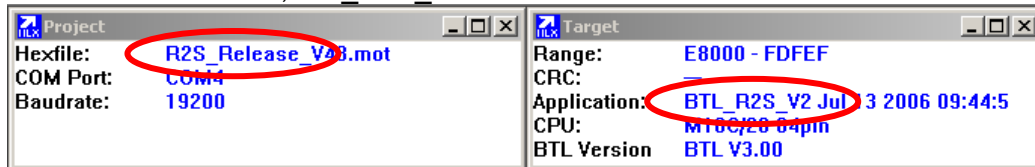

8. Start the programming with F9.
9. If programming is successful the message 'Job succeed' is displayed; then exit HexLoad.
10. The module is now ready for operation with the new firmware.

## Additional information

Details on the sensor configuration are described in the sensors instruction manual. Details on the UMB-protocol specification including UMB error codes are found in the “UMB Protocol”. All these documents are available on [www.lufft.com](http://www.lufft.com) in the section support – download – manuals – UMB-Technology.

### **G. Lufft Mess- und Regeltechnik GmbH**

Gutenbergstraße 20  
70736 Fellbach

PO Box 4252  
70719 Fellbach  
Germany

Phone: +49 711 51822-0  
Hotline: +49 711 51822-52  
Fax: +49 711 51822-41  
E-mail: [info@lufft.de](mailto:info@lufft.de)